

Chiron

User's Manual



V1.0.3









Foreword

General

This manual introduces the functions and operations of Chiron (hereinafter referred to as "the Camera"). Read carefully before using the device, and keep the manual safe for future reference.

Safety Instructions

The following signal words might appear in the manual.

Signal Words	Meaning
 DANGER	Indicates a high potential hazard which, if not avoided, will result in death or serious injury.
 WARNING	Indicates a medium or low potential hazard which, if not avoided, could result in slight or moderate injury.
 CAUTION	Indicates a potential risk which, if not avoided, could result in property damage, data loss, reductions in performance, or unpredictable results.
 ESD	Electrostatic Sensitive Devices. Indicates a device that is sensitive to electrostatic discharge.
 ELECTRIC SHOCK	Indicates dangerous high voltage. Take care to avoid coming into contact with electricity.
 LASER RADIATION	Indicates a laser radiation hazard. Take care to avoid exposure to a laser beam.
 TIPS	Provides methods to help you solve a problem or save time.
 NOTE	Provides additional information as a supplement to the text.

Revision History

Version	Revision Content	Release Time
V1.0.3	Updated the description of some functions.	February 2023
V1.0.2	Updated the packing list.	January 2023
V1.0.1	Updated "System Update".	December 2022
V1.0.0	First release.	November 2022

Privacy Protection Notice

As the device user or data controller, you might collect the personal data of others such as their face, fingerprints, and license plate number. You need to be in compliance with your local privacy protection laws and regulations to protect the legitimate rights and interests of other people by implementing measures which include but are not limited: Providing clear and visible identification to inform people of the existence of the surveillance area and provide required contact information.

About the Manual

- The manual is for reference only. Slight differences might be found between the manual and the product.
- We are not liable for losses incurred due to operating the product in ways that are not in compliance with the manual.
- The manual will be updated according to the latest laws and regulations of related jurisdictions. For detailed information, see the paper user's manual, use our CD-ROM, scan the QR code or visit our official website. The manual is for reference only. Slight differences might be found between the electronic version and the paper version.
- All designs and software are subject to change without prior written notice. Product updates might result in some differences appearing between the actual product and the manual. Please contact customer service for the latest program and supplementary documentation.
- There might be errors in the print or deviations in the description of the functions, operations and technical data. If there is any doubt or dispute, we reserve the right of final explanation.
- Upgrade the reader software or try other mainstream reader software if the manual (in PDF format) cannot be opened.
- All trademarks, registered trademarks and company names in the manual are properties of their respective owners.
- Please visit our website, contact the supplier or customer service if any problems occur while using the device.
- If there is any uncertainty or controversy, we reserve the right of final explanation.

Important Safeguards and Warnings

This section introduces content covering the proper handling of the device, hazard prevention, and prevention of property damage. Read carefully before using the device, and comply with the guidelines when using it.

Transportation Requirements



- Transport the Camera within the allowed humidity and temperature conditions.
- Do not fall, squeeze, violently vibrate or immerse the device in liquid when transporting. Gently pick and place the Camera when moving, prevent the internal equipment becoming damaged or cable connection becoming loose.
- Do not transport the Camera without package. Use the factory default package or material of equal quality to pack the Camera when transporting it, otherwise the Camera can become easily damaged.

Storage Requirements



- Store the Camera within the allowed humidity and temperature conditions.
- Do not place the device in a humid, dusty or extremely hot or cold site that has strong electromagnetic radiation or unstable illumination.
- Do not squeeze, violently vibrate or immerse the device in liquid.
- Do not mechanically vibrate or crash when storing.
- Store the Camera in a ventilated place that has no strong electromagnetic radiation.
- For long-term storage of the battery, make sure that it is fully charged every half year to ensure the battery quality. Otherwise, damage may occur.

Operation Requirements



- Prevent liquid from flowing into the Camera to avoid damage to the internal components.
- Do not stuff foreign materials into the Camera to prevent a short circuit which could result in the Camera being damaged or people becoming injured.
- Do not expose the device to high electromagnetic radiation or dusty environments.
- Do not aim the lens at the sun or any other bright light.
- Improper use or replacement of the battery may result in explosion hazard.
- Do not charge other battery types with the supplied charger. Confirm there is no flammable material within 2 m of the charger during charging.
- Make sure that the plug is properly connected to the power socket.
- Do not connect multiple devices to one power adapter, to avoid over-heating or fire hazards caused by overload.
- If smoke, odor, or noise arises from the device, immediately turn off the power, unplug the power cable, and contact the service center.



- Do not dismantle the Camera. The internal components can only be repaired by a qualified professional. Dismantling it without professional assistance might cause water seeping in or might result in the Camera producing poor quality images.
- Operating temperature: $-30\text{ }^{\circ}\text{C}$ to $+55\text{ }^{\circ}\text{C}$ ($-22\text{ }^{\circ}\text{F}$ to $+121\text{ }^{\circ}\text{F}$), and the operating humidity shall be 95% or less.

Maintenance and Repair Requirements



DANGER

- Prevent liquid from flowing into the Camera to avoid damage to the internal components. In case the liquid enters the Camera, immediately stop using the Camera, cut off the power, and disconnect all the cables, and then contact your local customer service center.
- Use the accessories regulated by the manufacturer. The Camera should be maintained by qualified professionals.
- Make sure to cut off the power before cleaning the Camera, to prevent electric shock.



WARNING

If the Camera malfunctions, contact your local customer service center. Do not dismantle the Camera.



- Clean the Camera body with a piece of soft dry cloth. For any dirt that is hard to remove, pick up a piece of clean and soft cloth, dip it into a little neutral detergent and gently wipe the dust away. After that, wipe away all the remaining liquid on the Camera with another dry cloth. Never use volatile solvents such as alcohol, benzene and thinner, or cleaners that are strong and abrasive. Otherwise, the Camera's surface coating will be damaged and its working performance will be encumbered.
- Save the factory package of the Camera. When the Camera malfunctions, pack the Camera with the factory package and send to the dealer.

Table of Contents

Foreword	I
Important Safeguards and Warnings.....	III
1 Product Introduction	1
1.1 Overview	1
1.2 Functions	1
2 Structure	2
2.1 Packing List.....	2
2.2 Device Description	2
3 Basic Operation	5
3.1 Starting and Shutdown	5
3.1.1 Manual Starting and Shutdown	5
3.1.2 Auto Shutdown.....	5
3.2 Configuring the Camera.....	5
3.2.1 Menu Description	5
3.2.2 Image Adjustment.....	6
3.2.2.1 Adjusting Diopter	6
3.2.2.2 Adjusting Focus	6
3.2.2.3 Setting Colorization.....	6
3.2.2.4 Setting Digital Zoom	9
3.2.2.5 Setting Light.....	9
3.2.2.6 Setting Contrast.....	9
3.2.3 Setting Scene Mode.....	9
3.2.4 Setting Zeroing Profile.....	10
3.2.5 Setting Zeroing	10
3.2.6 Setting PIP	11
3.2.7 Setting Ranging Mode.....	12
3.2.8 Setting FFC Mode.....	12
3.2.9 Setting DPC	13
3.2.10 Setting Hot Point.....	13
3.2.11 Setting Wi-Fi Connection	13
3.2.12 System Settings	15
3.3 Video and Snapshot	16
3.3.1 Recording Videos.....	16
3.3.1.1 Auto Recording	16
3.3.1.2 Recording Videos.....	16

3.3.2 Capturing Images	16
3.3.3 Exporting File.....	16
3.4 Power Supply.....	17
3.4.1 Installing the Battery	17
3.4.2 Charging.....	17
3.5 Installing Guide Rail	17
4 System Update.....	19
4.1 Upgrading Manually	19
4.2 Upgrading through App.....	19
Appendix 1 Compliance Notice.....	20

1 Product Introduction

1.1 Overview

The thermal monocular camera captures sharp thermal imaging at a fast frame rate for smooth, impeccable vision on running targets and from moving vehicles. Designed to increase situational awareness at any time of day, the camera can detect humans, animals, and objects in complete darkness, haze, or through glaring light, equipping law enforcement professionals, hunters, and outdoor enthusiasts with reliable thermal imaging in tough conditions. It is widely used in outdoor scenarios for hunting, animal observation, and more.

1.2 Functions

- **Colorization**
Different colorization modes display different effects.
- **Digital zoom**
Supports 1×, 2×, 4× and 8× digital zoom. The number might differ depending on devices.
- **Zeroing profile**
The Camera supports up to multiple zeroing profiles, and each profile has multiple coordinates, which makes the shoot more accurate.
- **Picture in picture**
The target with the reticle can be magnified in the OSD image, which offers a closer view of the target with the whole visual scene.
- **Auto recording**
When the impact sensor of the Camera detects impact, it will automatically record the video, recording the wonderful moment of hunting.
- **Range measurement**
Marks the top and bottom of the target, and the screen automatically displays the distance of the target from the camera.
- **Hot point tracking**
Detects and marks the highest and lowest temperature point.
- **Network**
Supports network connection through the Wi-Fi. You can add the Camera through mobile app to realize functions, such as capturing, recording and parameter configuration.
- **Storage**
Built-in storage (up to 16 GB), supports recording and capturing.
- **Automatic standby and shutdown**
Supports setting time of automatic suspend and shutdown.

2 Structure

2.1 Packing List

Table 2-1 Packing list

Name	Quantity
Camera	1
Type-C Cable	1
Rechargeable Battery	2
Battery Charger	1
Guide Rail	1
Quick Start Guide	1
Legal and Regulatory Information	1
Warranty Card	1

2.2 Device Description

Figure 2-1 Button description

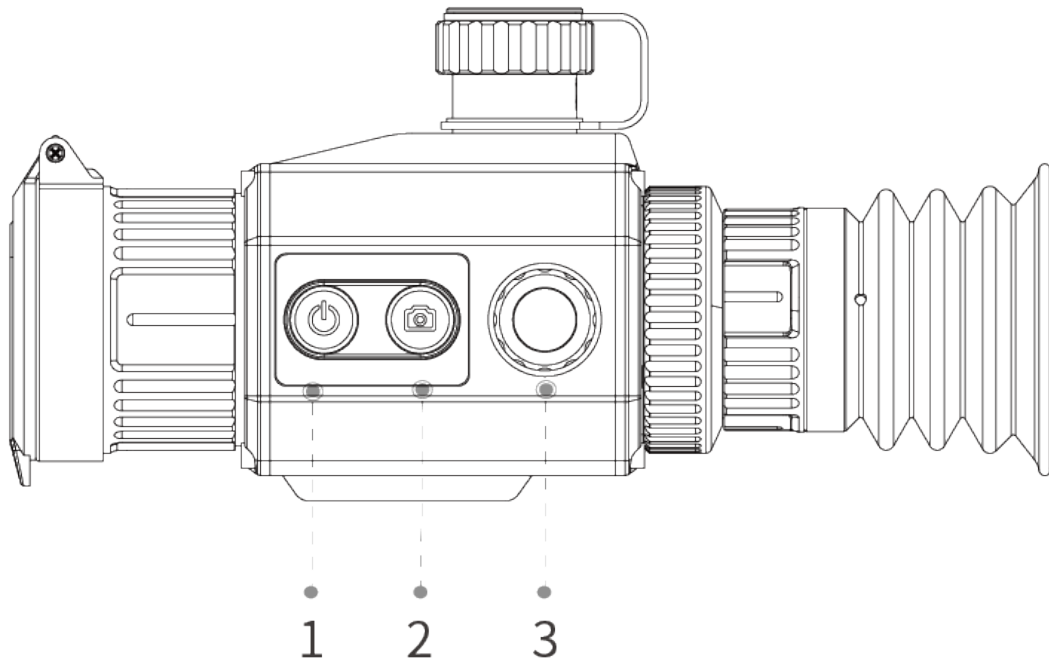


Table 2-2 Button description

No.	Name	Description
1	Power button	<ul style="list-style-type: none">Press and hold to start or shut down the Camera.Double-press to enable the sleep mode..

No.	Name	Description
2	Capture button	<ul style="list-style-type: none"> Press and hold to record videos. Press to capture images.
3	Menu/Zoom/FFC button	<ul style="list-style-type: none"> Press and hold to go to the standard menu. Press to go to the brief menu. Rotate the button for digital zoom. Double-press to do the flat-field calibration for the image.
1 + 2	Power button + Capture button	Press at the same time to select the pseudo color.
1 + 3	Power button + Menu button	Press at the same time to select the zeroing profile.

Figure 2-2 Component description

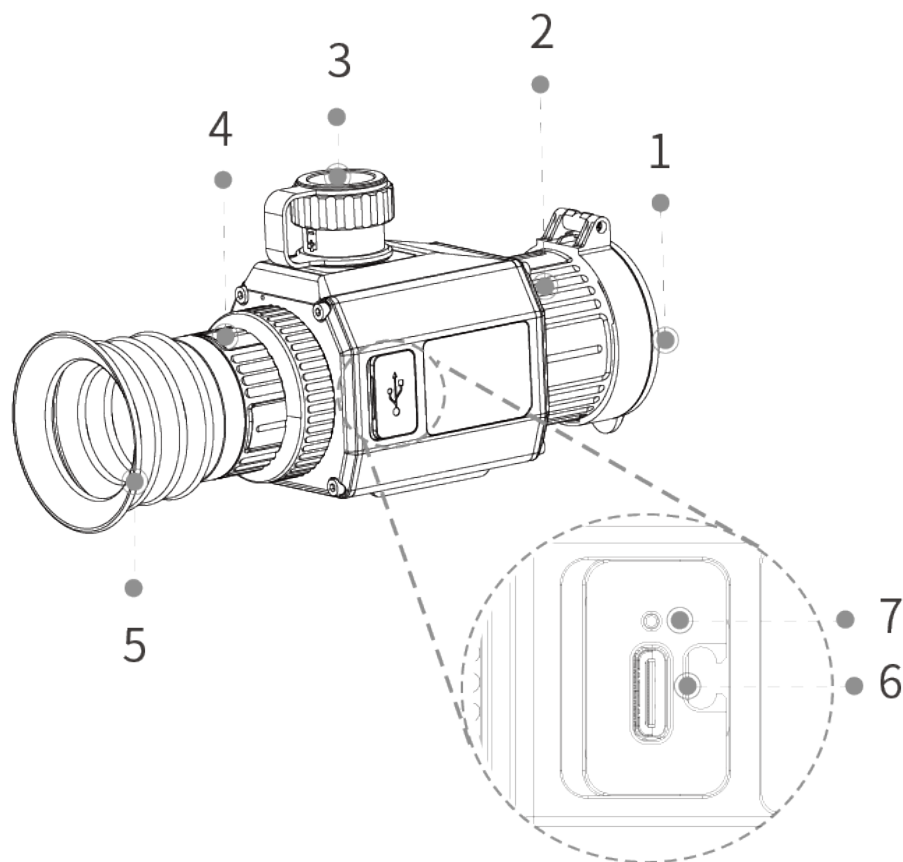


Table 2-3 Component description



No.	Name	Description
1	Protective cover	Dust prevention. Close the cover when not using the Camera.
2	Adjustable lens	Manually rotate the lens to adjust the focus for a clear image.
3	Battery compartment	The place for holding the battery.
4	Diopter adjustment rotary knob	Adjust according to your eyesight.
5	Eyeshade	Protects the eyes from glare.

No.	Name	Description
6	Type-C port	<ul style="list-style-type: none"> • Connects to a data cable for charging. • Connects the Camera to a smart phone to view live images through the app. • Connects to the Camera to a computer for exporting files.
7	Charging indicator	<ul style="list-style-type: none"> • Red and green lights flashing alternately: charging error. • Red light on: charging. • Green light on: fully charged. • Off: not connected to data cable to charge.

3 Basic Operation





3.1 Starting and Shutdown

3.1.1 Manual Starting and Shutdown









Press and hold  to start or shut down the Camera; double-press  to suspend or weak up the Camera.



After starting the Camera, remove the protective cover of the lens.


- When the Camera is shut down, press and hold  to start it.
- When the Camera is on, press and hold  to shut down it.
- When the Camera is on, double-press  to suspend the Camera.
- When the Camera is in suspend mode, double-press  to weak up it.




3.1.2 Auto Shutdown

- Step 1 Press and hold  to go to the standard menu.
- Step 2 On the standard menu, rotate  to select .
- Step 3 Press  to go to the **System Settings** configuration screen.
- Step 4 Rotate  to select **Auto Shutdown**.
- Step 5 Press , and then rotate  to set the auto shutdown time.
- Off: Disable auto shutdown.
 - 30 Min, 60 Min: If there is no operation in the configured time, the Camera will automatically shut down.
- Step 6 Press  to save the configuration.

3.2 Configuring the Camera

3.2.1 Menu Description

When the Camera is on, press and hold  to go to the standard menu. Functions of all buttons are as follows.

- Rotate  to move upward or downward the cursor.
- Press  to confirm.
- Press  to exit.

3.2.2 Image Adjustment

3.2.2.1 Adjusting Diopter

To get clear images, rotate the eyepiece to fit your eyesight.




For the first-time use, adjust the diopter before configuring the functions.

Step 1 Aim the lens at the target, and then make your eyes close to the eyeshade.

Step 2 Adjust clockwise or counterclockwise the eyepiece to your eyesight.

Figure 3-1 Adjust diopter

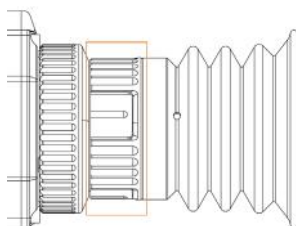

3.2.2.2 Adjusting Focus

Manually rotate the lens to adjust the focus for a clear image.

Step 1 Aim the thermal lens to the target.

Step 2 Adjust clockwise or counterclockwise the focusing wheel until the view is clear.



During the adjustment, do not touch the lens to avoid smudging it; otherwise it may affect the image quality.


3.2.2.3 Setting Colorization

Select the colorization, which adds color to the thermal image and uses color to indicate the temperature.

Step 1 Press and hold  to go to the standard menu.

Step 2 Rotate  to select .

Step 3 Press  to go to the **Colorization** configuration screen.

Step 4 Rotate  to select the colorization.

- White Hot: The objects with high temperature are white. The higher the temperature, the brighter the color.
- Sepia: The objects with high temperature are amber. The higher the temperature, the brighter the color.
- Green Hot: The objects with high temperature are green. The higher the temperature, the brighter the color.
- Alarm: The objects with high temperature are red. The objects can stand out.
- Iron Red: The objects with high temperature are red. The higher the temperature, the brighter the color.
- Black Hot: The objects with high temperature are black. The higher the temperature,

the darker the color.


Step 5 Press  to save the configuration.

Figure 3-2 White hot



Figure 3-3 Sepia



Figure 3-4 Green hot



Figure 3-5 Alarm

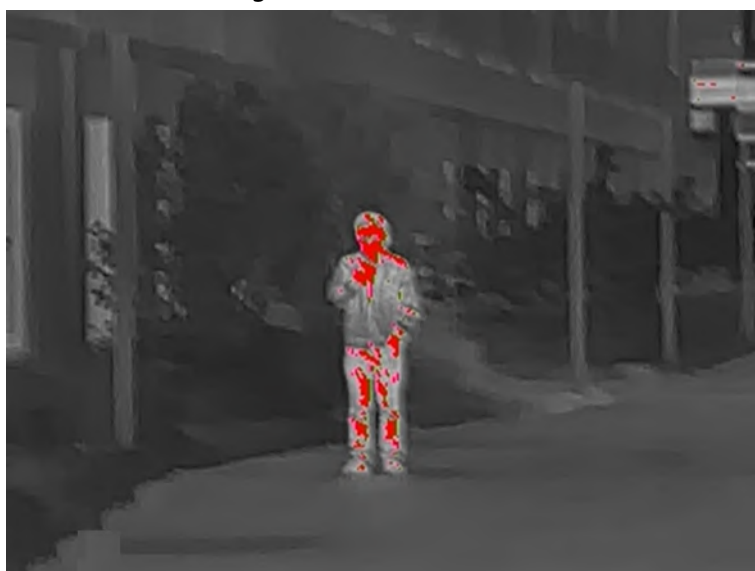


Figure 3-6 Iron red




Figure 3-7 Black hot










3.2.2.4 Setting Digital Zoom

Digital zoom helps to zoom in the image.

On the viewing screen, rotate  to do digital zoom, and the image changes.







3.2.2.5 Setting Light

You can set the brightness of the image (level 1, level 2, level 3 level 4 and level 5).





- Step 1 Press and hold  to go to the standard menu.
- Step 2 Rotate  to select .
- Step 3 Press  to go to the **Light** configuration screen.
- Step 4 Rotate  to select the level. The higher the level is, the brighter the image will be.
- Step 5 Press  to save the configuration.
- Step 6 Press  to select the level.



3.2.2.6 Setting Contrast

You can set the contrast of the image (level 1, level 2, level 3 level 4 and level 5).

- Step 1 Press and hold  to go to the standard menu.
- Step 2 Rotate  to select .
- Step 3 Press  to go to the **Contrast** configuration screen.
- Step 4 Rotate  to select the level. The higher the level is, the more the contrast will be between bright and dark areas.
- Step 5 Press  to save the configuration.

3.2.3 Setting Scene Mode

- Step 1 Press and hold  to go to the standard menu.
- Step 2 Rotate  to select .
- Step 3 Press  to go to the **Scene Mode** configuration screen.






- Step 4** Rotate  to select the scene mode from **Standard** and **Forest**.
- Standard: Used for daily observation.
 - Forest: Stands out the targets with high temperature, which makes it easier to find out the targets.
- Step 5** Press  to save the configuration.

3.2.4 Setting Zeroing Profile

Prerequisites


Before setting zeroing profile, make sure that you have configured zeroing in **Zeroing**. For details, see "3.2.5 Setting Zeroing".

Procedure

- Step 1** Press and hold  to go to the standard menu.
- Step 2** Rotate  to select .
- Step 3** Press  to go to the **ZeroingProfile** configuration screen.
- Step 4** Rotate  to select the zeroing profile as needed.



The camera supports up to 6 zeroing profiles.








- Step 5** Press  to save the configuration.

3.2.5 Setting Zeroing

Prerequisites




Before setting zeroing, make sure that you have selected the zeroing group in **Zeroing Profile**. For details, see "3.2.4 Setting Zeroing Profile".

Procedure

- Step 1** Press and hold  to go to the standard menu.
- Step 2** Rotate  to select .
- Step 3** Press  to go to the **Zeroing** configuration screen.
- Step 4** Rotate  to select the parameters to be configured.
- Reticle No.
 1. Press .
 2. Rotate  to select a number as the reticle number.










You can set 5 numbers at most.

3. Press  to save the configuration.
- Type
 1. Press .
 2. Rotate  to select the reticle type.



The Camera supports 11 reticles.

3. Press  to save the configuration.

- Color
 1. Press .
 2. Rotate  to select the reticle color from **White, Red, Green**.
 3. Press  to save the configuration.
- Distance
 1. Press .
 2. Rotate  to select the distance between the target and the Camera.
 3. Press  to save the configuration and go to the reticle configuration screen.

Step 5 Adjust the reticle.








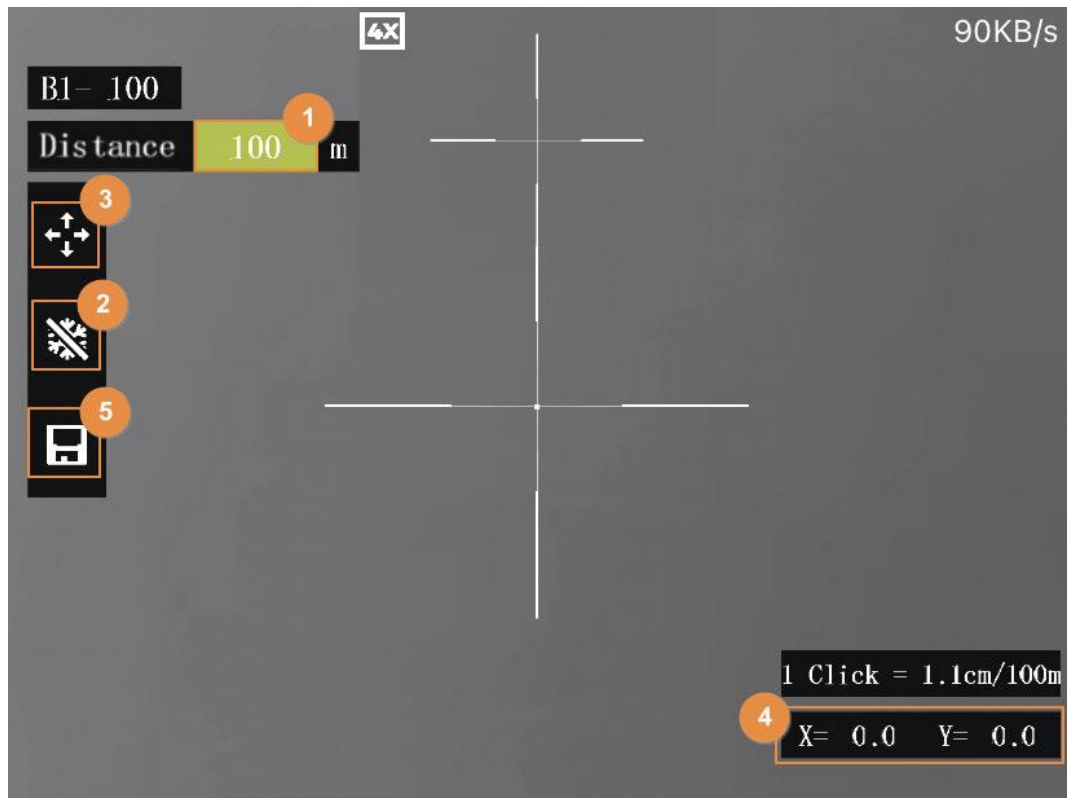
- 1) When the cursor on the distance value, press  to set the distance.
- 2) Select  and press  to freeze the image.
- 3) Select  and press  to select X-axis and Y-axis.
- 4) Rotate  to adjust the position of the reticle.
- 5) Select  to save the configuration.

Figure 3-8 Adjust the reticle





3.2.6 Setting PIP

After enabling PIP, the target with the reticle can be magnified in the OSD image, which offers a closer view of the target with the whole visual scene.

Step 1 Press and hold  to go to the standard menu.


Step 2 Rotate  to select .

Step 3 Press  to go to the **PIP** configuration screen.

Step 4 Rotate  to select **On** and **Off**.

- On: An OSD image is displayed on the screen, and the target with the reticle can be magnified in the OSD image.

- Off: Disable the PIP.

Step 5 Press  to save the configuration.

3.2.7 Setting Ranging Mode

After setting the ranging mode, the Camera can measure the range towards targets.




To guarantee the measurement accuracy, keep your hand steady when measuring the range.


Step 1 Press and hold  to go to the standard menu.

Step 2 Rotate  to select .

Step 3 Press  to go to the **Ranging Mode** configuration screen.

Step 4 Rotate  to select the ranging mode.

You can select from **Rabbit**, **Wolf**, **Deer**, **Wild Boar** and **Customize**.

Step 5 Press  to save the configuration.

Two green lines are displayed on the screen.



When you select **Customize**, you need to set the height of the target.


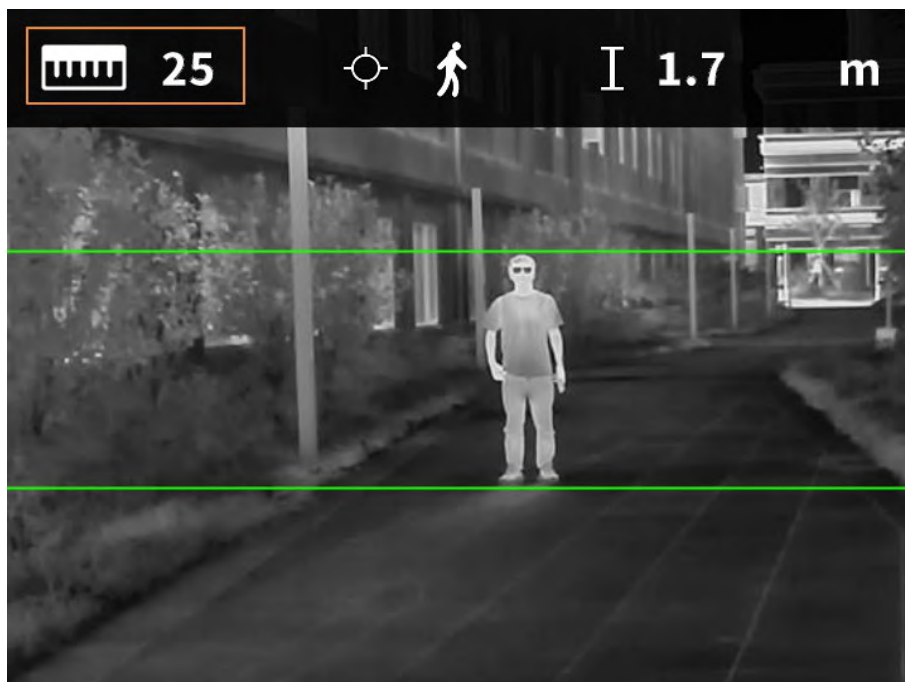
Step 6 Rotate  to move the green lines to the top and bottom of the target to get the distance between the target and the Camera.

Figure 3-9 Ranging Mode



3.2.8 Setting FFC Mode





With FFC (Flat-Field Calibration), the thermal image can be optimized, and you can easily find out temperature changes. You can set the FFC mode from **Auto**, **immediately** and **Manual**.

Step 1 Press and hold  to go to the standard menu.

Step 2 Rotate  to select .

Step 3 Press  to go to the **FFC Mode** configuration screen.

Step 4 Select the FFC mode.


- Auto: The camera calibrates image automatically every certain period.
 1. Rotate  to select **Auto**.
 2. Press  to confirm.
The camera calibrates image automatically.
- Manual: Calibrate the image manually as needed.
 1. Rotate  to select **Manual**.
 2. Double-press  to calibrates the image manually.

3.2.9 Setting DPC






After enabling DPC (Defective Pixels Correction), you can correct the defective pixels in the image.

Step 1 Press and hold  to go to the standard menu.

Step 2 Rotate  to select .

Step 3 Press  to go to the **DPC** configuration screen.

Step 4 Rotate  to set DPC.

- Auto: The Camera automatically corrects the defective pixels in the image.
 1. Select **Auto**.
 2. Press  to start the auto correction.
 3. Follow the screen instructions to close the lens cover.
 4. Press  to save the configurations.
- Manual: You need to correct the defective pixels manually.
 1. Press  to select X-axis and Y-axis.
 2. Rotate  to calibrate the defective pixels.
 3. Press and hold  to save the configuration.



The center of the cursor is the position of the defective pixel.

- Restore: The DPC configuration is restored to the primary state.


3.2.10 Setting Hot Point


Tracks the point with the highest temperature in real time.

Step 1 Press and hold  to go to the standard menu.

Step 2 Rotate  to select .

Step 3 Press  to go to the **Hot Point On** configuration screen.

Step 4 Rotate  to enable or disable the hot point.

Step 5 Press  to save the configuration.

After enabling the hot point, the hot point icon will automatically locate at the points with the highest in the image.

3.2.11 Setting Wi-Fi Connection

After enabling Wi-Fi connection, you can connect your phone to the hotspot of the Camera, and

then access the Camera with the app.

The frequency bands and modes and the nominal limits of transmitted power (radiated and/or conducted) applicable to this radio device are the following:

Wi-Fi 2.4 GHz (2.4 GHz to 2.4835 GHz)	20 dBm
---------------------------------------	--------



Some cameras will automatically disable the Wi-Fi function when the battery level is lower than 15%.


Step 1 Scan the QR code with your smart phone to install the app.

Figure 3-10 QR code





Step 2 Press and hold  to go to the standard menu.

Step 3 Rotate  to select .





Step 4 Press  to go to the **WiFi** configuration screen.

Step 5 Enable the Wi-Fi function.

- Hotspot: Use the Camera as the hotspot, and connect your phone to the hotspot of the Camera.
 1. Rotate  to select **Hotspot**, and then press .
 2. Enable the Wi-Fi of your smart phone, and then connect to the hotspot of the Camera.
 - ◇ Wi-Fi name: Model number + serial number.
 - ◇ Wi-Fi password: The last 8 digits of the serial number.



You can find the serial number on the Camera and the label of the packing box.

3. Log in to the app. The password is the last 8 digits of the serial number. Add devices according to the prompt.
- STA: Use your phone as the hotspot, and connect Camera to the hotspot of your phone.
 1. Rotate  to select **WiFi**, and then press .
 - The Wi-fi name and password are displayed on the screen.
 2. Change the Wi-Fi name and password of your phone as the screen shows.
 3. Select , and then press . The Camera automatically connects to the hotspot of your phone.
 4. Log in to the app. The password is the last 8 digits of the serial number. Add devices according to the prompt.
 - Off: Disable the Wi-Fi function

3.2.12 System Settings















- Step 1** Press and hold  to go to the standard menu.
- Step 2** Rotate  to select .
- Step 3** Press  to go to the **System Settings** configuration screen.
- Step 4** Rotate  to select the parameter to be configured.

Table 3-1 System settings

Parameter	Description
OSD Set	<ul style="list-style-type: none"> On: Displays the start bar in the upper-right corner of the screen, including the current zeroing file, Wi-Fi, memory usage, digital zoom and battery level. Off: Not displays the start bar.
MIC	<ul style="list-style-type: none"> On: The videos are recorded with sound. Off: The videos are recorded without sound.
BurningWarning	<ul style="list-style-type: none"> On: Enable burning warning. Off: Disable burning warning.
Auto Standby	Rotate  to set the auto standby time. <ul style="list-style-type: none"> Off: Disable auto standby. 15 Min, 30 Min: The Camera will automatically standby in the configured time.
Logo	Rotate  to set whether to display the logo during device starting. <ul style="list-style-type: none"> On: Display the logo during device starting. Off: Not display the logo during device starting.
USB Mode	Rotate  to select the USB mode from Off, UVC, Storage . <ul style="list-style-type: none"> Off: Charge the Camera. UVC: Connect the Camera to a smart phone to view live images through the app. Storage: The Camera can be used as a storage device.
Language	Rotate  to select the language as needed.
Unite Set	Rotate  to select the unite from Meter and Feet .
Storage	Rotate  to select the storage mode from FullDiskStop and FullDiskCover . <ul style="list-style-type: none"> FullDiskStop: Stop recording videos or capturing image when the disk is full. FullDiskCover: Cyclically overwrite the earliest video or image files when the disk is full.
Version	Press  to view the information of the device.
Restore Default	Press  to restore the parameters to the defaults.

- Step 5** Press  to save the configuration.

3.3 Video and Snapshot

3.3.1 Recording Videos

3.3.1.1 Auto Recording

When the impact sensor of the Camera detects impact, it will automatically record the video, recording the wonderful moment of hunting.


Step 1 Press and hold  to go to the standard menu.

Step 2 On the standard menu, rotate  to select .


Step 3 Press  to go to the **Auto REC** configuration screen.


Step 4 Rotate  to enable or disable **Auto REC**.

- On: The Camera will record videos when the impact sensor of the Camera detects impact.
- Off: The Camera will not record videos any time.

Step 5 Press  to save the configuration.

3.3.1.2 Recording Videos

On the viewing interface, press and hold  for 3 seconds to start recording a video. The OSD flashes red on the screen and the recording time is display.

Press and hold  again for 3 seconds to stop the recording. When the recording stops, the recording time will display normally.

3.3.2 Capturing Images

On the viewing page, press  to capture images.

The screen will display an icon when the capturing succeeds.

3.3.3 Exporting File

Exports the recorded and captured files.

Step 1 Connect the Camera to the computer through type-C data cable.
The driver will automatically be installed for first-time connection.



- Connect the cables before starting the Camera. Do not hot swap the type-C port of the Camera.
- Select **Storage** on the **USB Mode** configuration screen after connecting the Camera to the computer.

Step 2 On the computer desktop, double-click **My Computer**, and then open the Camera disk at a mobile storage device.

Step 3 Select the files to export and copy them to the computer.
The specific computer client is required for playing the exported files.

- Step 4 Disconnect the type-C data cable with the computer.
After connecting the Camera to the computer, images can be displayed on the Camera, but the functions of recording and capturing will not be available.

3.4 Power Supply

You can supply power to the Camera through the rechargeable battery coming with the Camera or charging with the Type-C cable.

3.4.1 Installing the Battery

- Step 1 Open the cover of the battery compartment.
Step 2 Put one battery into the battery compartment.



Make sure that the battery is installed with the positive electrode downward.

- Step 3 Tighten the cover.

3.4.2 Charging

The start bar will display battery information after the Camera starts. When the battery is low, charge the Camera timely to make sure the normal function.

- During charging, keep the battery temperature 0 °C to +60 °C (+32 °F to +140 °F).
- Charge the Camera with the data cable that comes with the delivery.

- Step 1 Open the sealing cover of the port when charging.
Step 2 Connect the type-C cable to the port to charge the Camera.

The charging indicator states:

- Red and green lights flashing alternately: charging error.
- Red light on: charging.
- Green light on: fully charged.
- Off: not connected to data cable to charge.

3.5 Installing Guide Rail

Prerequisites

Before installing the guide rail, shut down the Camera and clean the bracket and guide rail with clean cloth.

Procedure

- Step 1 Fix the Camera on the guide rail with the fixed screws.
Step 2 Tighten the knobs of the guide rail.







Figure 3-11 Install guide rail



4 System Update

Update the Camera manually or through the app.

4.1 Upgrading Manually

- Step 1 Press and hold  to go to the standard menu.
- Step 2 Rotate  to select .
- Step 3 Press  to go to the **System Settings** configuration screen.
- Step 4 Rotate  to select **USB Mode**.
- Step 5 Rotate  to select **Storage**.
- Step 6 Copy the upgrading file (.bin).
- Step 7 Restart the Camera.

4.2 Upgrading through App

When the app detects new program for upgrading, it will prompt a notification. Tap **Upgrade** to upgrade the system.

Appendix 1 Compliance Notice

The thermal series products might be subject to export controls in various countries or regions, including without limitation, the United States, European Union, United Kingdom and/or other member countries of the Wassenaar Arrangement. Please consult your professional legal or compliance expert or local government authorities for any necessary export license requirements if you intend to transfer, export, re-export the thermal series products between different countries.