



酒店袖珍型 IP 话机 HS108-PS 快速操作指南

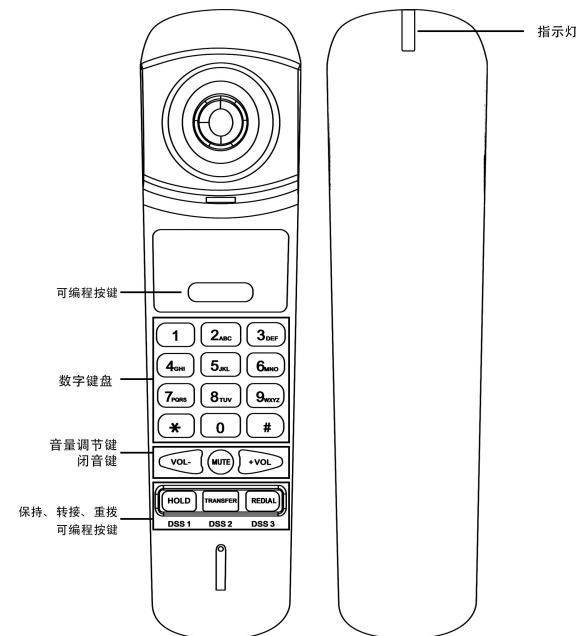

指示灯


LED 灯状态	描述
红色闪烁	对应线路保持或有来电正在呼入
红色常亮	对应线路摘机且正在进入正常通话状态
灭灯	待机状态

挂墙指引

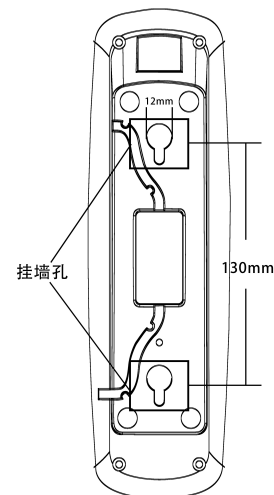

1-1

网络链接

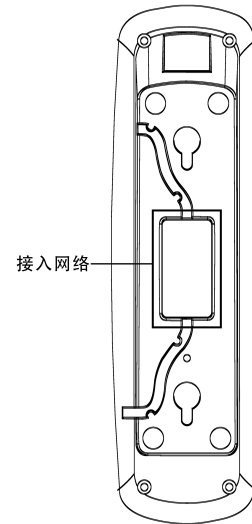

网络设置

IP地址查询：摘机按“*1*1*1”；恢复出厂值：摘机按“*3*3*3”。

在 **WEB>网络>本地网口配置** 下，可快速设置 LAN 网口及 PC 口的相关信息：

LAN： 网络类型/IP/子网掩码/网关/DNS1 & DNS2/web 端口/telnet 端口。

快速注册

在 **WEB 设置>账号 SIP 设置**，分别配置下列主要参数：

a)是否启用账号* b)账号类型 c)账号* d)密码* e)主 SIP 域名*

设置好以上参数后，按**提交键**即可完成 SIP 帐户的添加；

发出呼叫

- **摘机：** 提起手柄或按**摘机键**，输入需要拨出的号码，然后按**#键**；
- **直接呼叫：** 直接拨打号码，然后按**#键**；
- **重拨：** 按**重拨键**以拨打最近一个拨出的号码；

1-2

功能键

功能键：

- 4个可编程按键，其中三个默认功能为保持、转接、重拨，可再自定义为速拨等功能。
- 数字键0-9速拨键，网页后台配置成功后，长按对应号码能实现一键拨号。

音量调节

话机状态	对应所调节音量
待机状态	振铃铃声音量
手柄摘机状态	手柄听筒音量

● 您可以通过以下方式对应调节列表中的音量：

a) **网页设置：** 进入 web 页面，选择菜单“声音调节”；

*更多的详细内容请参考本话机的用户手册。您也可以通过访问话机的 **Web 页面**来进行更详细的参数配置。

配件清单


列表	数量
话机	1
网线	1
快速操作指南	1



广州市亿景通信技术有限公司
地址：广州市天河区东圃镇黄村路 51 号粤安工业园 C 栋 4 楼
网址：http://www.escene.cn
客户服务：400 090 5818

1-3


Hotel Compact Type IP Phone HS108-PS Quick Operator

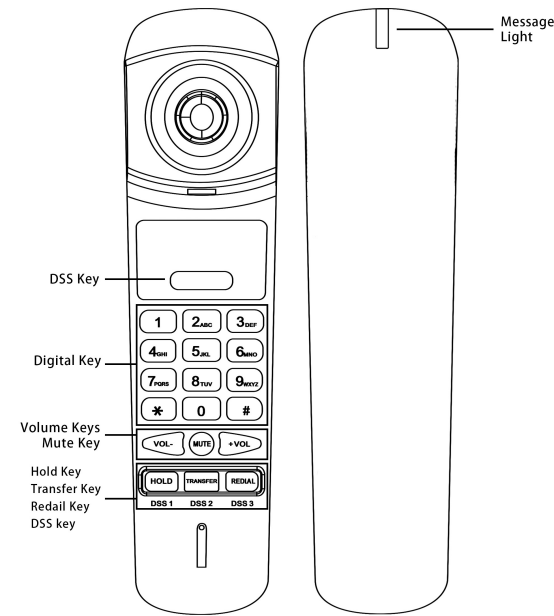

Message Light


LED Status	Description
Red, flashing	There is an incoming call or call on hold.
Red, steady	Pick up and enter normal call.
Lighting-off	Free

Wall hole

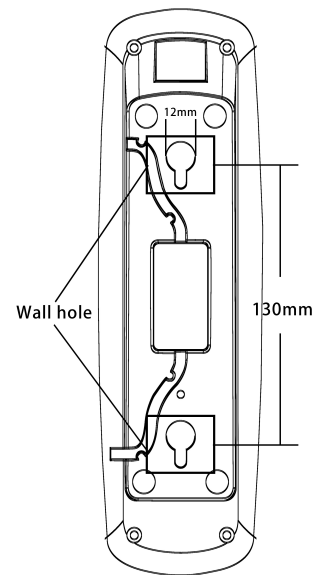

2-1

Network Connection

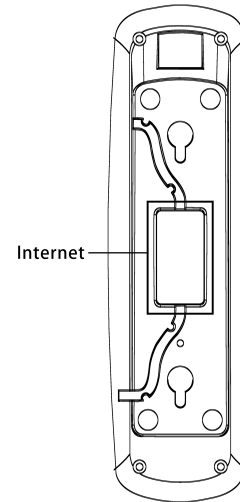

Network Setting

Check IP address: Pick up and press "*1*1*2"; Restore setting: Pick up and press "*3*3*3".

If you want to set of network information, Pls login into WEB>Network LAN Port: Type/IP/Mask/GW/DNS1or2/Web Port/Telnet Port

Register

Login into WEB> SIP account Setting,

As the following options is main functions .

- a)Enable account* b)Account Mode c)User Name* d)user pwd*
- e)SIP1*

When you finished above setting, your account will be work now.

Placing a Call

- **Speaker:** Press **Speaker** button and dial number directly, then press # button to dial.
- **Dial directly:** Dial number directly, then press # button to dial
- **Redial:** Press **Redial** button/soft-key to dial the latest number;

2-2

Function Keys

Function Keys:

- 4 DSS keys for different functions, such as Speed Dial etc. DSS1~3 default is Hold/Transfer/Redial function.
- 10 speed dial keys to customize different services.

Volume Adjustment

Phone Status	Corresponding volume
Standby	Ring volume
Hook off	Handset volume

You can adjust the corresponding input volume as follow:

- Web Set: Enter website >select "Volume setting".

*For details, you can refer to the corresponding User Manual.

Summary

List	Count
Phone	1
Cable	1
Quick Operator Guide	1



ESCENE COMMUNICATION CO.,LTD.

Web: <http://www.escene.cn/en>

Address: Floor 4 Building C YueAn Industrial Park No.51 Huangcun Road Tianhe District Guangzhou China

2-3